
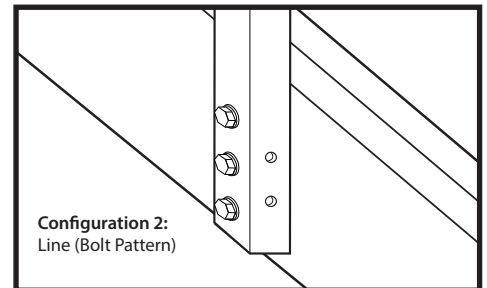
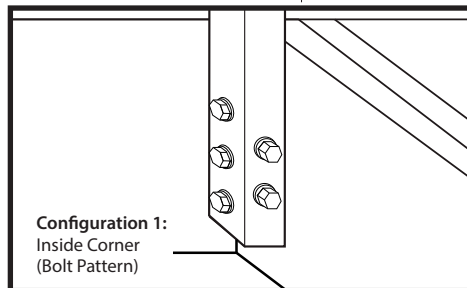


FASCIA MOUNTED POST INSTALLATION WITHOUT BRACKETS

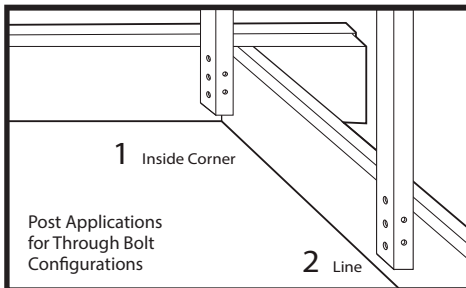

STEP 1

Ensure that framing exists behind fascia or fascia board is reinforced with adequate blocking to exceed post installation load requirements.

STEP 2

Position post so that a minimum of 1.25" exists between the top edge of the fascia board to the first pre-drilled fastener holes. CINCH recommends through bolting posts whenever possible. *Refer to local building and safety codes for required anchoring specifications.*

STEP 3

Align post to ensure it is square to the deck surface. Position post as shown in *Configurations 1 & 2 (above)* according to Inside Corner or in Line requirements. Outside Corner installations require the use of brackets. Mark position of post holes on fascia board, and pre-drill holes using a 3/8" drill bit.

STEP 4

Position post over holes, and secure post loosely using appropriate 3/8" fasteners.

STEP 5

Check to see if post is square with deck surface. If adjustment is necessary, use supplied shims to square post and complete post installation by tightening fasteners securely.

STEP 6

Follow instructions provided to complete rail and stair bracket and panel installations.