
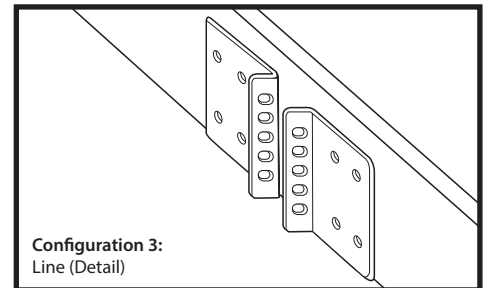
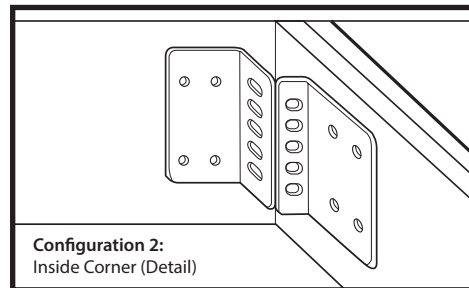
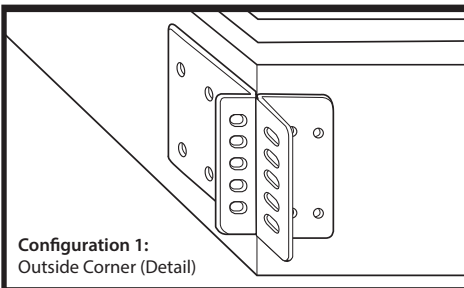


FASCIA MOUNTED POST INSTALLATION

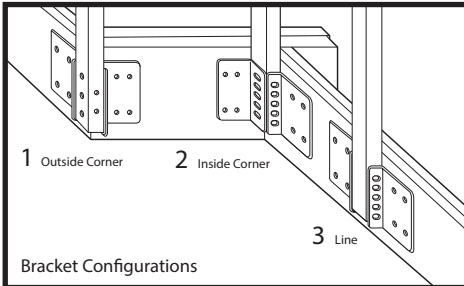

STEP 1

Ensure that framing exists behind fascia or fascia board is reinforced with adequate blocking to exceed post installation load requirements. Position brackets so that a minimum of 1.25" exists between the top edge of the fascia board to the first fasteners. CINCH recommends through bolting posts whenever possible (see *Bracket Configurations*). Refer to local building and safety codes for required anchoring specifications.

STEP 2

Align post to ensure it is square to the deck surface. Position brackets as shown in *Configurations 1-3 (above)* according to outside corner, inside corner or in line requirements. Mark position of bracket holes on fascia board, and pre-drill holes using a 3/8" drill bit.

STEP 3

Position brackets over holes and fasten to fascia board using appropriate 3/8" fastener.

STEP 4

Position post against brackets, aligning pre-drilled holes in post to bracket holes (see *suggestions on illustrations*). Secure post loosely using appropriate 3/8" fasteners.

STEP 5

Check to see if post is square with deck surface. If adjustment is necessary, use supplied shims to square post and complete post installation by tightening bolts securely.

STEP 6

Follow instructions provided to complete rail and stair bracket and panel installations.