




**NOTE:** Responsibility of the installer to meet all codes and obtain all required building permits. Cinch™ or its distributors shall not be held liable for improper or unsafe installations. Post must always be secured to the deck framing, post should never be attached to the deck boards only. Remove all metal shavings from the cut areas. File any sharp edges left by cutting. Apply two coats of touch up paint to the cut area and allowing paint to dry recommended to use Rust-Oleum Satin Canyon Black code 249844. For Satin black finish and Hammered Brown Color code 210880 for Bronze.

## INSTALLING FLUSH CAP RAIL BRACKET

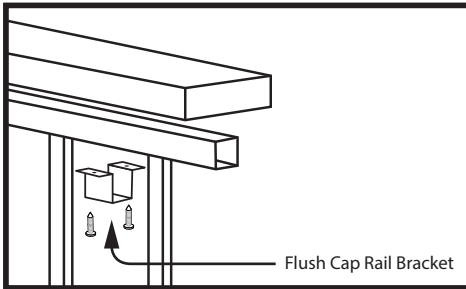

### STEP 1

Measure and cut the wood/composite top rail.

### STEP 2

Center the top rail on the top of the panel railing and temporarily secure with a clamp.

### STEP 3

Position the flush cap rail bracket no more than 6" from the post at each end of the wood top rail (*see illustration above*). Using bracket screw holes as a guide, mark the screw hole locations on the top cap.

### STEP 4

Space additional flush cap rail brackets no more than 28" on center along the length of the top rail and mark remaining screw hole locations.

### STEP 5

Remove the top rail and pre-drill the marks using a 1/16" drill bit, taking care not to drill all the way through the wood/composite top rail.

### STEP 6

Reposition the top rail on the panel and install brackets with the supplied [#8 x 1" Flat Head Wood Screw].