

CINCH™


NOTE: Responsibility of the installer to meet all codes and obtain all required building permits. Cinch™ or its distributors shall not be held liable for improper or unsafe installations. Post must always be secured to the deck framing, post should never be attached to the deck boards only. Remove all metal shavings from the cut areas. File any sharp edges left by cutting. Apply two coats of touch up paint to the cut area and allowing paint to dry recommended to use Rust-Oleum Satin Canyon Black code 249844. For Satin black finish and Hammered Brown Color code 210880 for Bronze.

PRE-ASSEMBLED GATE INSTALLATION

**HARDWARE REQUIRED FOR PRE-ASSEMBLED GATE INSTALLATION:
Assembled Gate, Gate Hinge Set (sold in pair), and Gate Latch Set.**

STEP 1

Gate opening between posts must be 36" to use the 34-1/2" pre-assembled gate (see Fig. 1-A).

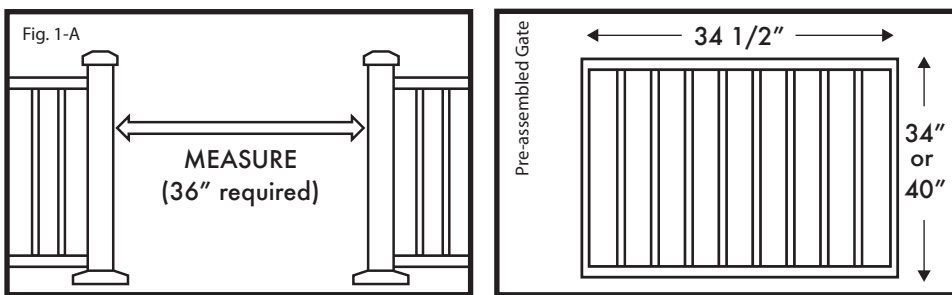

STEP 2

Pre-drill holes and install gate hinges to post and gate at the desired height using provided fasteners.

STEP 3

Pre-drill holes and install the gate latch at the desired height, using fasteners provided.